

TIRE AND WHEEL SYSTEM

INSPECTION

1. INSPECT TIRES


- (a) Check the tires for wear and proper inflation pressure.

**Cold tire inflation pressure:
for Hatchback**

Destination	Tire Size	Vehicle Speed	Front kPa (kgf/cm ² , psi)	Rear kPa (kgf/cm ² , psi)
North America	P175/65R14 81S P185/60R15 84T	Driving below 160 km/h (100 mph)	220 (2.2, 32)	220 (2.2, 32)
		Driving over 160 km/h (100 mph)	240 (2.4, 35)	240 (2.4, 35)
Mexico	185/60R15 84H	Driving below 160 km/h (100 mph)	220 (2.2, 32)	220 (2.2, 32)
		Driving over 160 km/h (100 mph)	230 (2.3, 33)	230 (2.3, 33)

for Sedan


Destination	Tire Size	Vehicle Speed	Front kPa (kgf/cm ² , psi)	Rear kPa (kgf/cm ² , psi)
North America	P175/65R14 81S P185/60R15 84T	Driving below 160 km/h (100 mph)	220 (2.2, 32)	220 (2.2, 32)
		Driving over 160 km/h (100 mph)	240 (2.4, 35)	240 (2.4, 35)
Mexico	175/65R14 82T 185/60R15 84H	Driving below 160 km/h (100 mph)	220 (2.2, 32)	220 (2.2, 32)
		Driving over 160 km/h (100 mph)	230 (2.3, 33)	230 (2.3, 33)

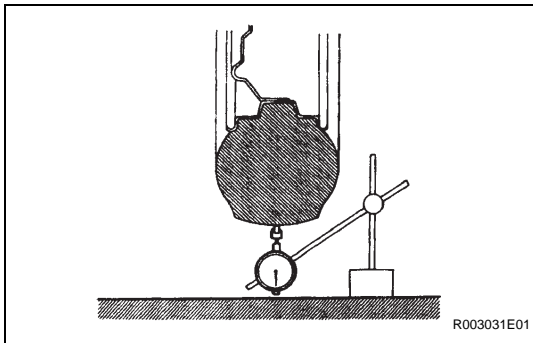


- (b) Using a dial indicator, check the tire runout.

Tire runout:

1.4 mm (0.055 in.) or less

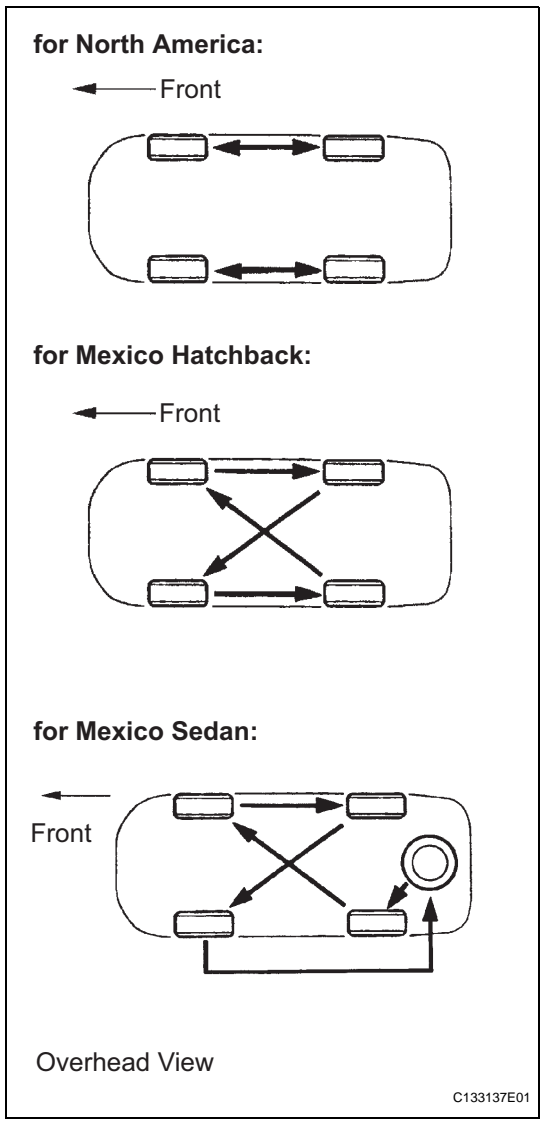

2. ROTATE TIRES
 HINT:
 Rotate tires, as shown in the illustration.

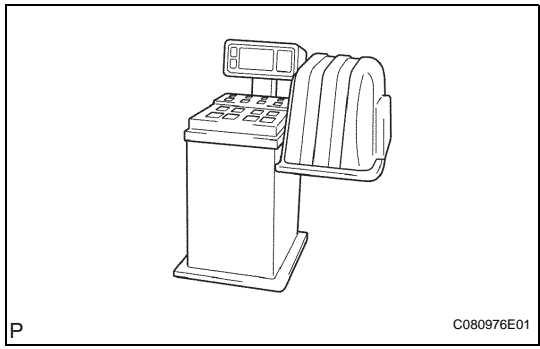

- 3. INSPECT WHEEL BALANCE**
- (a) Check and perform off-car balancing.
 - (b) If required, perform on-car balancing.
- Imbalance after adjustment:**
 8 g (0.018 lb) or less
- 4. INSPECT FRONT AXLE HUB BEARING** (See page [AH-1](#))
- 5. INSPECT REAR AXLE HUB BEARING** (See page [AH-2](#))