

ABBREVIATIONS

The following abbreviations are used in this manual.

A/C	=	Air Conditioning
A/T	=	Automatic Transmission
ABS	=	Anti-Lock Brake System
ACS	=	Air Conditioning Sensor
AFC	=	Air Flow Sensor
COMB.	=	Combination
DLC	=	Data Link Connector
ECT	=	Electronic Controlled Transmission
ECTS	=	Engine Coolant Temperature Sensor
ECU	=	Electronic Control Unit
EFI	=	Electronic Fuel Injection
EGR	=	Exhaust Gas Recirculation
EGRS	=	EGR Function Sensor
Ex.	=	Except
FL	=	Fusible Link
HO2S	=	Heated Oxygen Sensor
IACV	=	Intake Air Control Valve
IATS	=	Intake Air Temperature Sensor
ISC	=	Idle Speed Control
J/B	=	Junction Block
LH	=	Left-Hand
M/T	=	Manual Transmission
MAP	=	Manifold Absolute Pressure Sensor
MPI	=	Multipoint Electronic Fuel Injection
O/D	=	Overdrive
PCM	=	Powertrain Control Module
PNC	=	Park/Neutral Switch
PTCS	=	Powertrain Control Signals
PTIS	=	Powertrain Input Signals
R/B	=	Relay Block
RH	=	Right-Hand
SMPI	=	Sequential Multipoint Electronic Fuel Injection
SRS	=	Supplemental Restraint System
SW	=	Switch
TEMP.	=	Temperature
VSPG	=	Vehicle Speed Pulse Generator
VSS	=	Vehicle Speed Sensor
VSV	=	Vacuum Switching Valve
w/	=	With
w/o	=	Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.