

**○ : PARTS LOCATION**

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
A10	B	26	H 1	26	R 3	C	26	
A12	A	26	J 1	26	R 4		26	
A19		26	J 2	26	R20		27	
C 7		26	J 3	26	S11	A	27	
C11		26	O 4		26	S14	B	27
C15		26	R 1	A	26			
F 3		26	R 2	B	26			

**○ : RELAY BLOCKS**

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
5	21	R/B NO. 5 (FRONT LUGGAGE COMPARTMENT RIGHT)

**○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
3B	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3C		
3D		

**□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**


CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II2	34	LUGGAGE ROOM WIRE AND COWL WIRE (RIGHT KICK PANEL)
II3	34	COWL WIRE AND LUGGAGE ROOM WIRE (RIGHT KICK PANEL)

**▽ : GROUND POINTS**


CODE	SEE PAGE	GROUND POINTS LOCATION
IC	32	INSTRUMENT PANEL BRACE LH

**○ : SPLICE POINTS**

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 2	34	COWL WIRE	I 7	34	COWL WIRE
I 3			I 8		
I 4			I 10		
I 5					

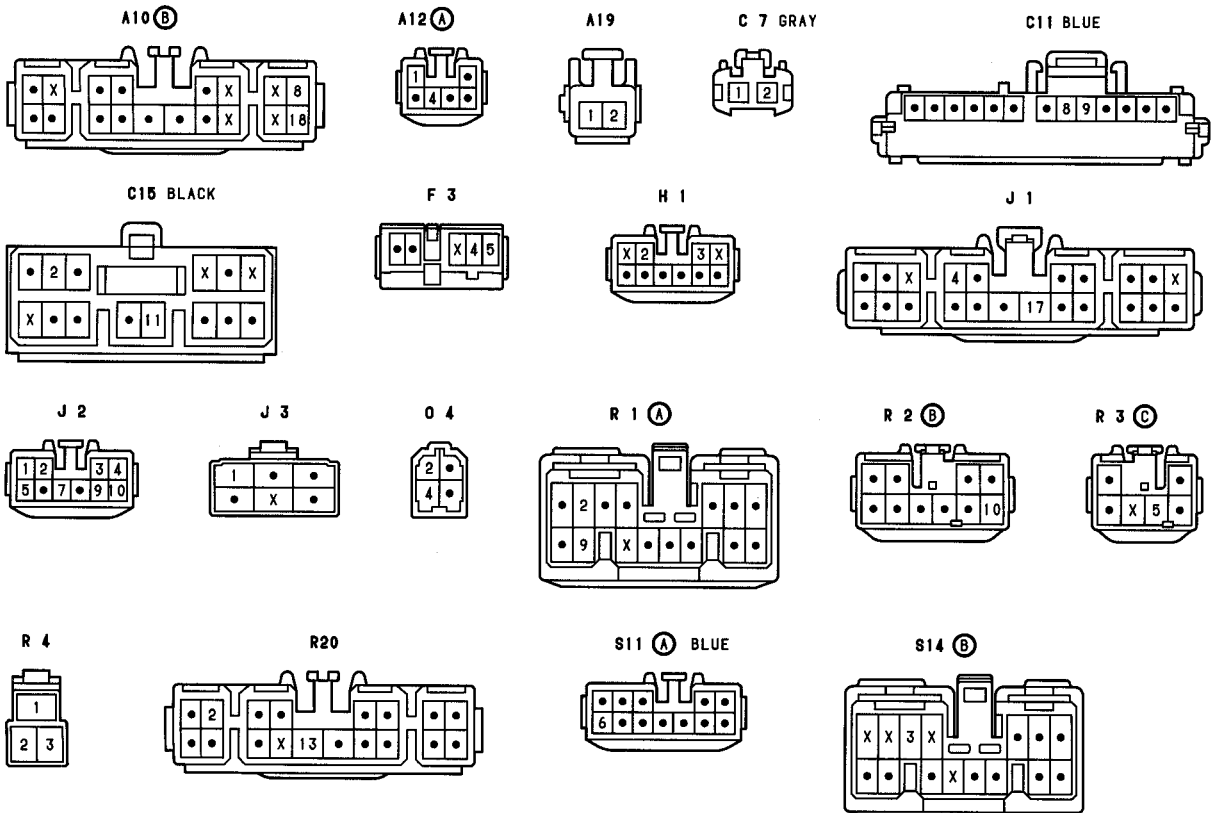

# ILLUMINATION (FOR USA)

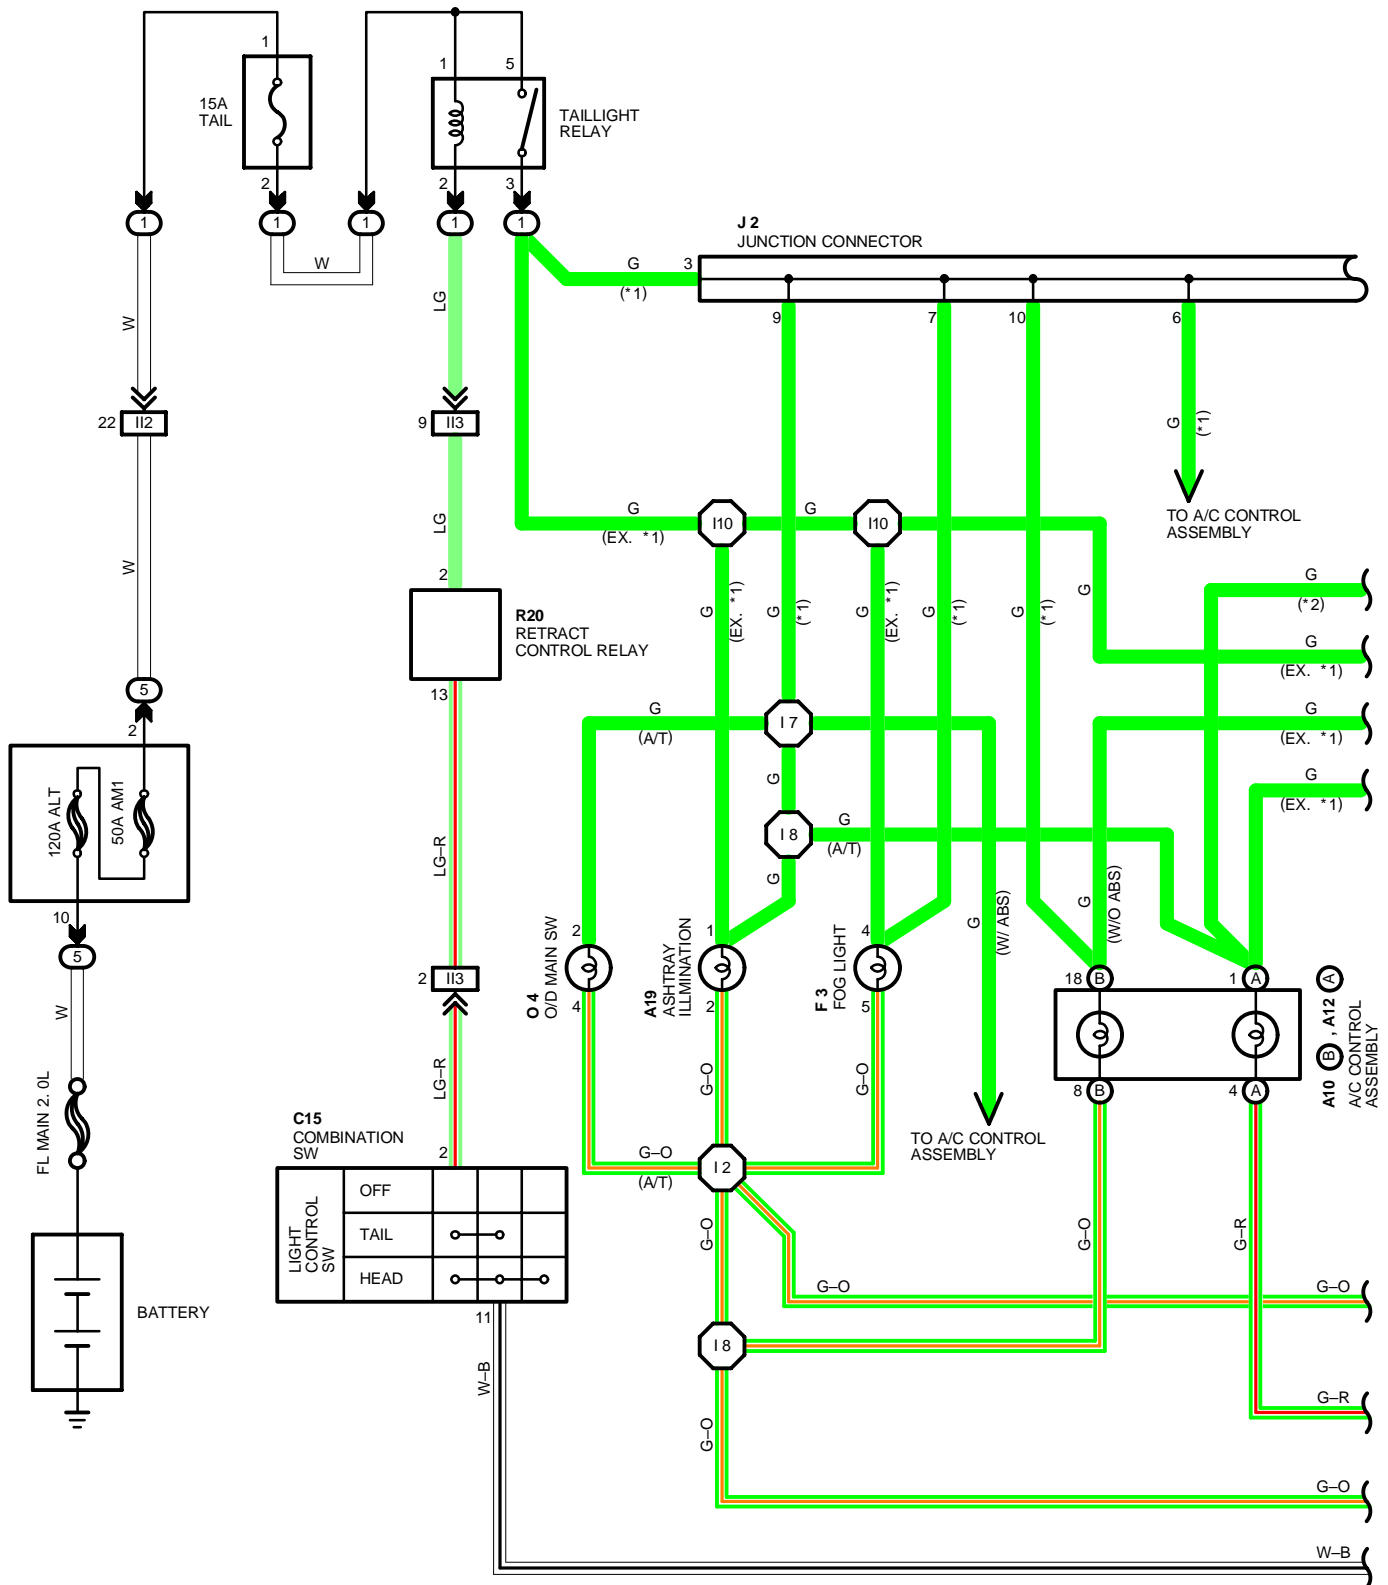

\*1 : (1) A/T  
 (2) M/T WITH CRUISE CONTROL, ABS, POWER WINDOW OR WOOFER SPEAKER  
 \*2 : M/T WITH CRUISE CONTROL, ABS, POWER WINDOW OR WOOFER SPEAKWR

### SERVICE HINTS

#### TAILLIGHT RELAY

(1) 5- (1) 3 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN LIGHT AUTO TURN OFF SYSTEM IS OFF)

#### R 4 RHEOSTAT

1-2 : APPROX. **12** VOLTS WITH RHEOSTAT FULLY TURNED COUNTERCLOCKWISE AND **0** VOLTS WITH FULLY TURNED CLOCKWISE

