


STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

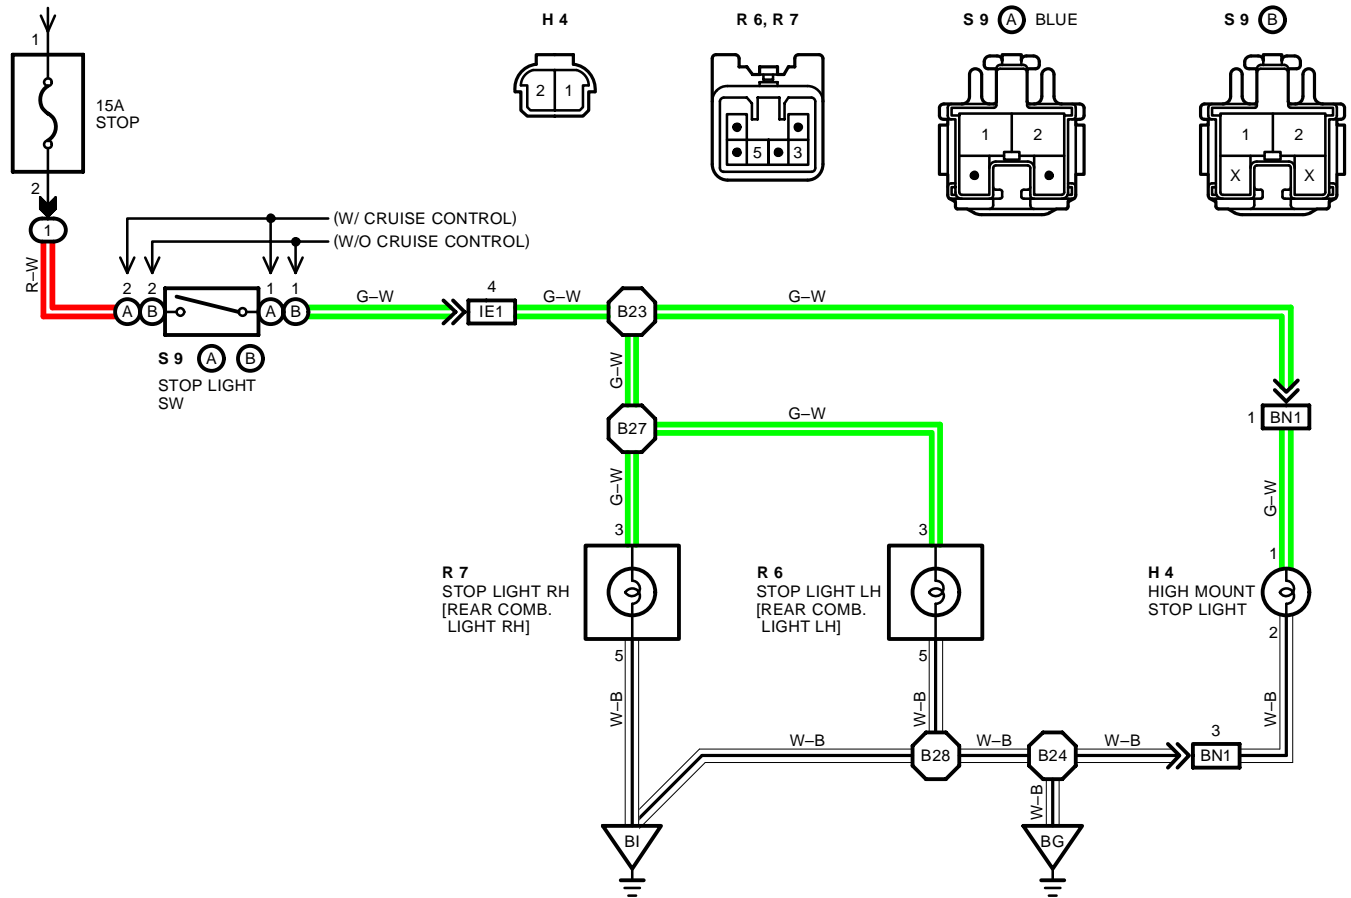

SERVICE HINTS

S9 STOP LIGHT SW

- (A) 1 - (A) 3 : CLOSED WITH BRAKE PEDAL DEPRESSED (W/ CRUISE CONTROL)
- (B) 1 - (B) 2 : CLOSED WITH BRAKE PEDAL DEPRESSED (W/O CRUISE CONTROL)

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
H 4	27	R 7	27	S 9	B 26
R 6	27	S 9	A 26		

□ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	32	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
BN1	36	ROOF NO.3 WIRE AND ENGINE ROOM MAIN WIRE

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BG	36	UNDER THE LEFT CENTER PILLAR
BI	36	BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B23	36	ENGINE ROOM MAIN WIRE	B27	36	ENGINE ROOM MAIN WIRE
B24			B28		