



COMBINATION METER

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

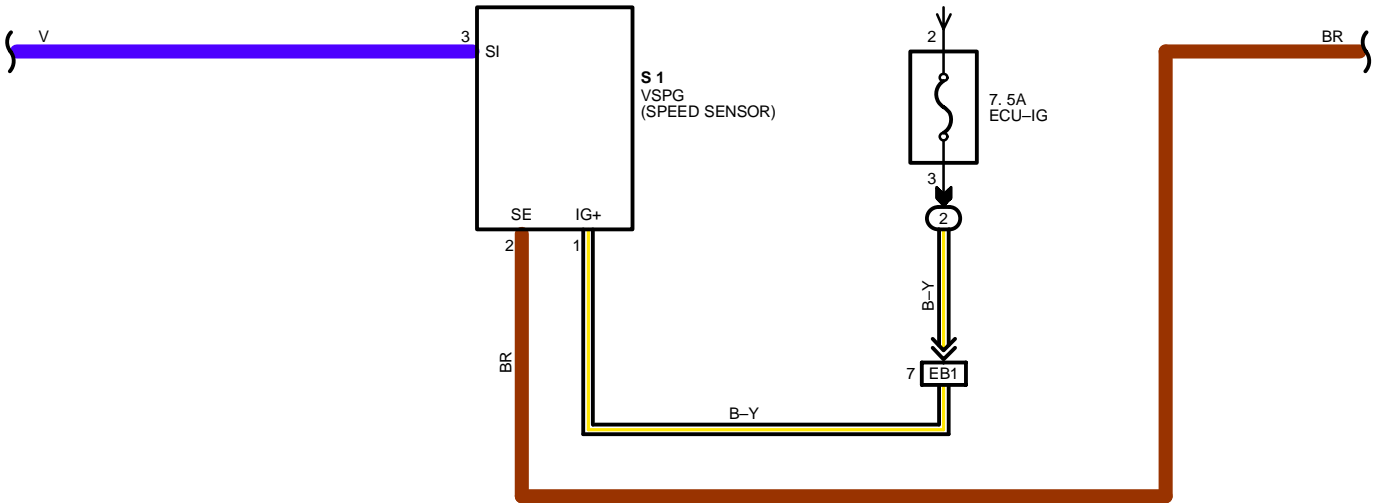


C10 (C), C11 (A), C12 (B), C13 (D)
COMBINATION METER

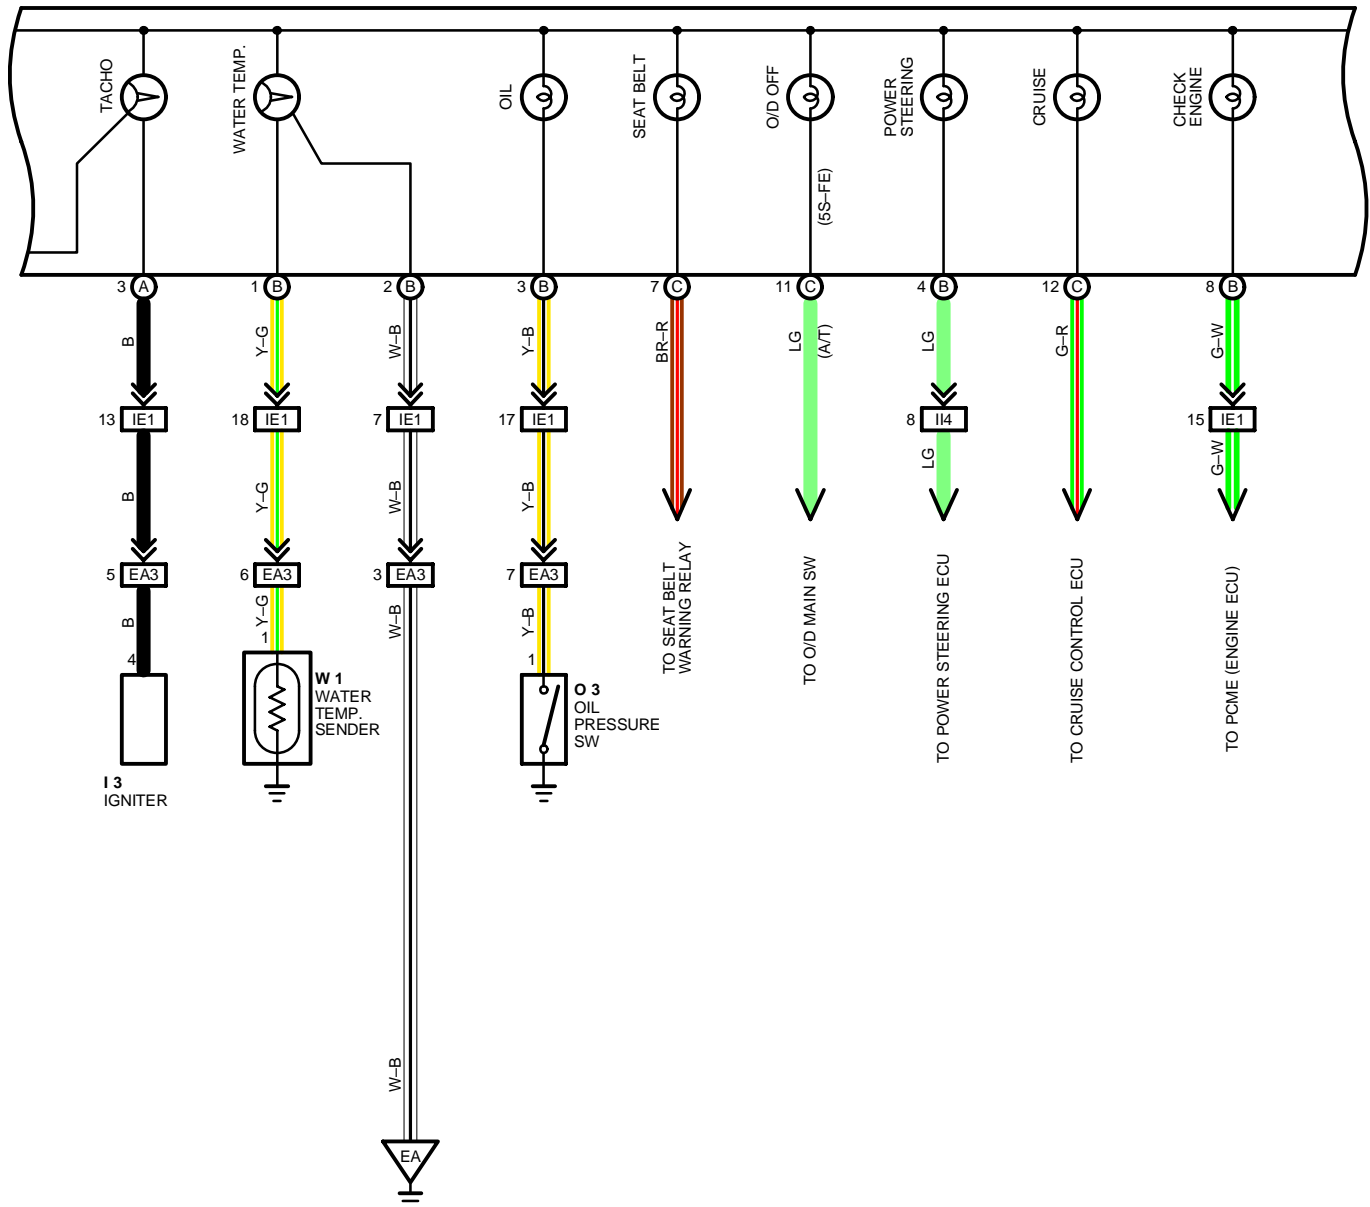

*1 : USA
 *2 : CANADA
 *3 : A/T

*4 : WITH ABS, CRUISE CONTROL POWER WINDOW OR WOOFER SPEAKER

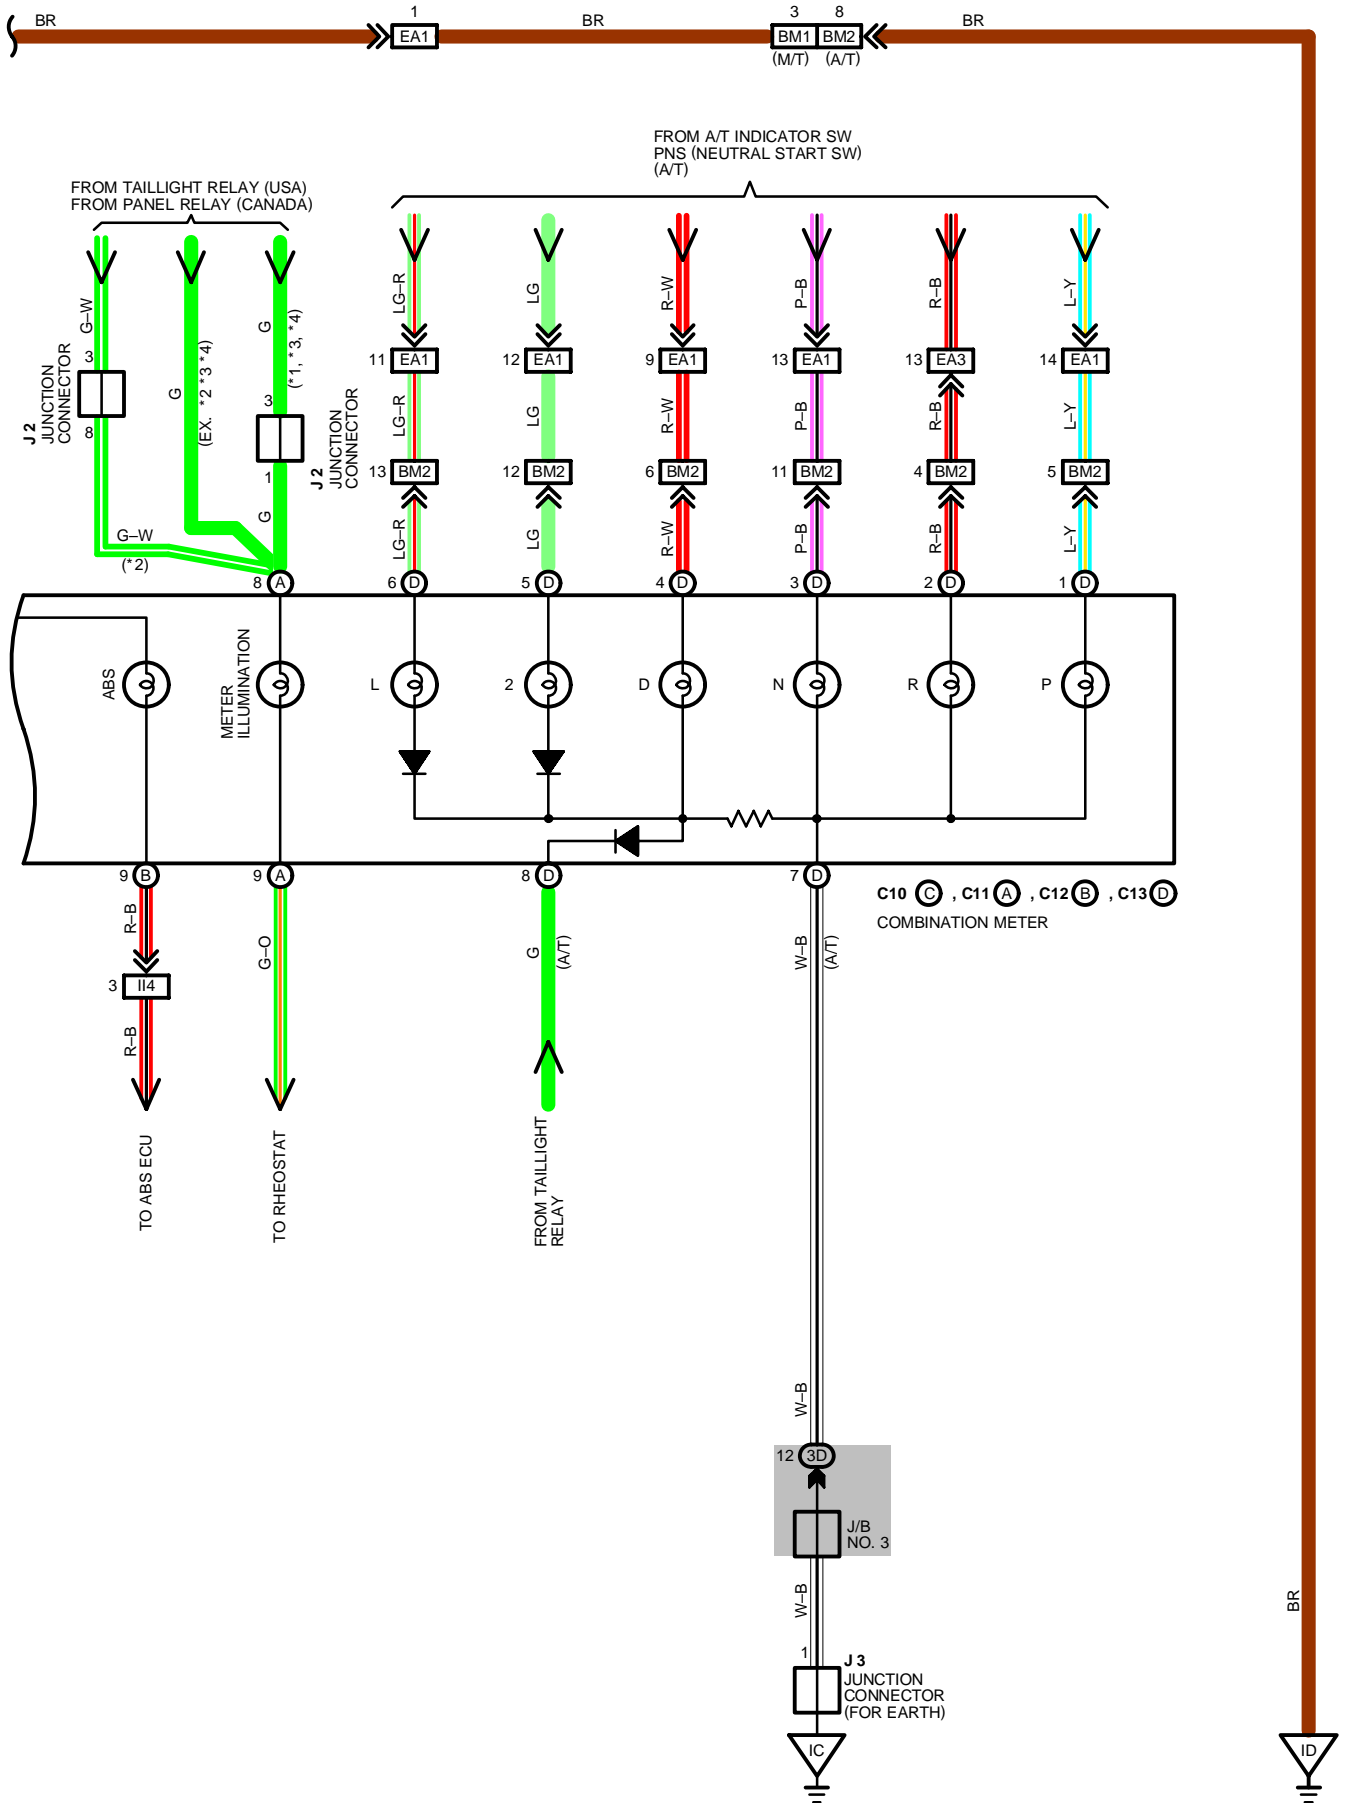

COMBINATION METER

SERVICE HINTS

B 5 BRAKE FLUID LEVEL SW

1-2 : CLOSED WITH FLOAT DOWN

C10(C), C11(A), C12(B) COMBINATION METER

(C)6, (C) 5-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 4-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION

(A)1, (B)2, (A) 6-GROUND : ALWAYS CONTINUITY

C13 (D) COMBINATION METER (5S-FE A/T)

(D) 1-GROUND : ALWAYS CONTINUITY

O 3 OIL PRESSURE SW

1-GROUND : CLOSED WITH OIL PRESSURE BELOW 0.2 KG/CM² (2.84 PSI, 19.61 KPA)

P 1 PARKING BRAKE SW

1-GROUND : CLOSED WITH PARKING BRAKE LEVER PULLED UP

W 1 WATER TEMP. SENDER

1-GROUND : APPROX. 198.5 Ω AT 50°C (122°F)

: APPROX. 29.7 Ω AT 105°C (221°F)

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 5	27	I 3	24 (5S-FE)	P 1	26
C10	C 26	J 1	25 (3S-GTE)	S 1	24 (5S-FE), 25 (3S-GTE)
C11	A 26	J 2	26	S12	A 26
C12	B 26	J 3	26	S13	B 26
C13	D 26 (5S-FE)	O 3	24 (5S-FE)	W 1	24 (5S-FE), 25 (3S-GTE)
E10	25 (3S-GTE)		25 (3S-GTE)		
F 5	26				

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	21	R/B NO. 2 (ENGINE COMPARTMENT LEFT)
5	21	R/B NO. 5 (FRONT LUGGAGE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
3A	22	COWL WIRE AND J/B NO. 3 (BEHIND COMBINATION METER)
3B		
3C		
3D		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	28 (5S-FE) 30 (3S-GTE)	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (REAR LUGGAGE COMPARTMENT LEFT)
EA3	28 (5S-FE) 30 (3S-GTE)	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (R/B NO. 2 INNER)
EB1	28	ENGINE WIRE AND R/B NO. 2 (R/B NO. 2 INNER)
EC1	30 (3S-GTE)	COWL WIRE AND COWL WIRE (BEHIND COMBINATION METER)
ID2	32	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IE1	32	LUGGAGE ROOM WIRE AND COWL WIRE (RIGHT KICK PANEL)
IE3		
II2	34	COWL WIRE AND LUGGAGE ROOM WIRE (RIGHT KICK PANEL)
II3	34	FLOOR WIRE AND COWL WIRE (RIGHT KICK PANEL)
II4		
IK2	34	COWL WIRE AND ENGINE ROOM MAIN WIRE (ROOM PARTITION BOARD LEFT)
BM1	36	
BM2		


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	28 (5S-FE)	INTAKE MANIFOLD
	30 (3S-GTE)	
IC	32	INSTRUMENT PANEL BRACE LH
ID	32	RIGHT KICK PANEL
BE	36	FRONT RIGHT FENDER
BF	36	FRONT LEFT FENDER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I4	34	COWL WIRE	B7	36	LUGGAGE ROOM WIRE
I5			B11		
I9					

 
B 5 GRAY




C10 C BROWN

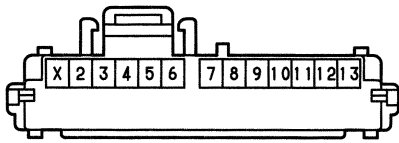


C11 A BLUE

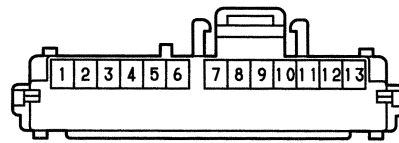

C12 B GRAY

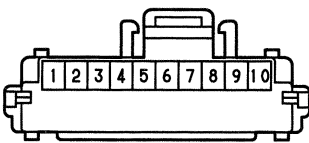


C13 D

 


E10 GRAY



 
F 5




(5S-FE) I 3 BLACK

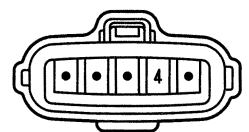


(3S-GTE) I 3 BLACK

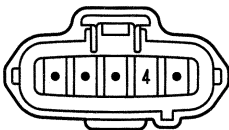


J 1

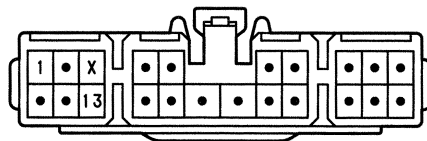

J 2

 

J 3

 

O 3 BLACK



P 1 BLACK



 
S 1 BLACK



S12 A



S13 B



W 1 BLUE

