
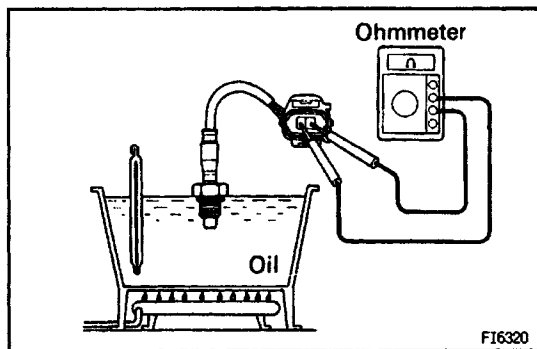


EGR FUNCTION SENSOR (Calif.)

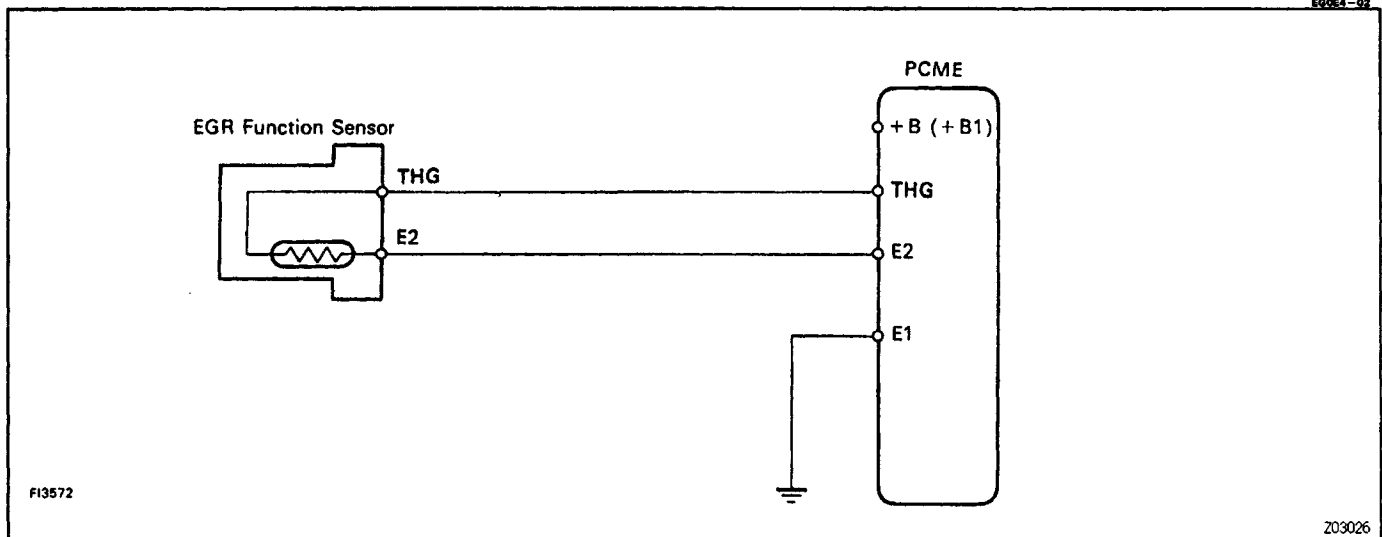

EGR FUNCTION SENSOR INSPECTION

1. REMOVE EGR FUNCTION SENSOR
2. INSPECT EGR FUNCTION SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

69 – 89 k Ω at 50° C (112° F)

11 – 15 k Ω at 1000C (2120F)

2 – 4 k Ω at 1500C (302°F)

If the resistance is not as specified, replace the sensor.

3. REINSTALL EGR FUNCTION SENSOR