
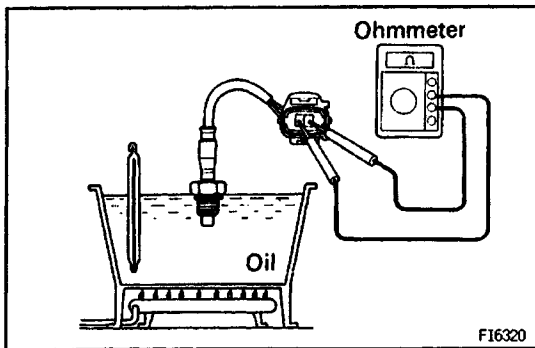


EGR FUNCTION SENSOR (Calif.)

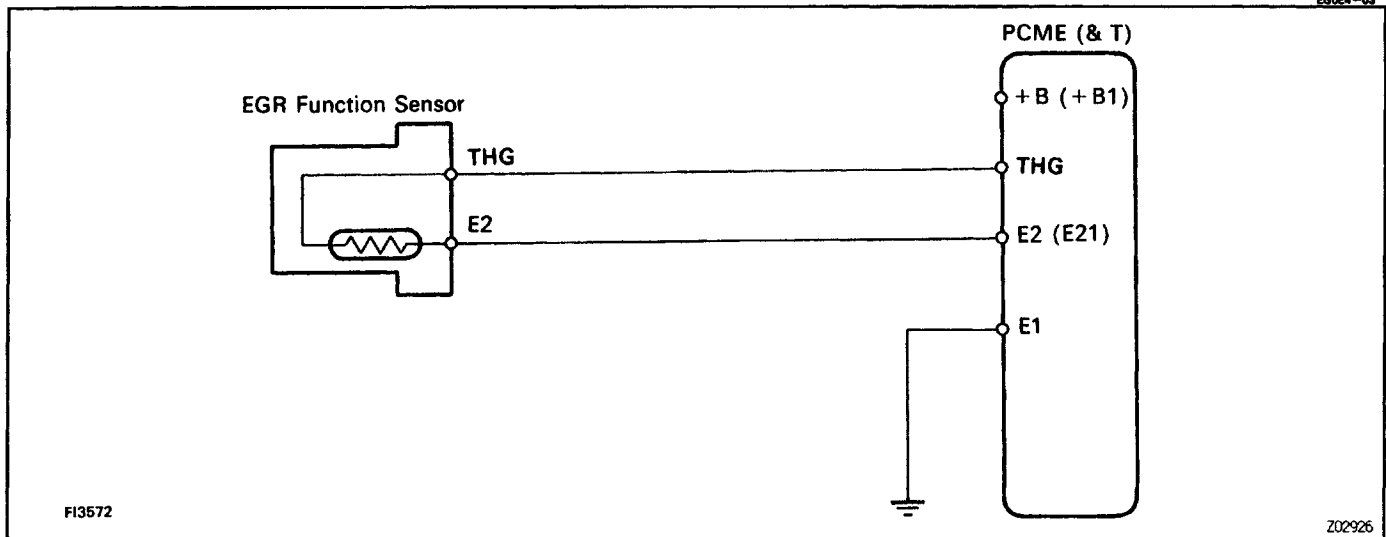

EGR FUNCTION SENSOR INSPECTION

1. REMOVE EGR FUNCTION SENSOR
2. INSPECT EGR FUNCTION SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

69 – 89 k Ω at 50° C (112° F)

11 – 15 k Ω at 100° C (212° F)

2 – 4 k Ω at 150° C (302° F)

If the resistance is not as specified, replace the sensor.

- 3: REINSTALL EGR FUNCTION SENSOR