
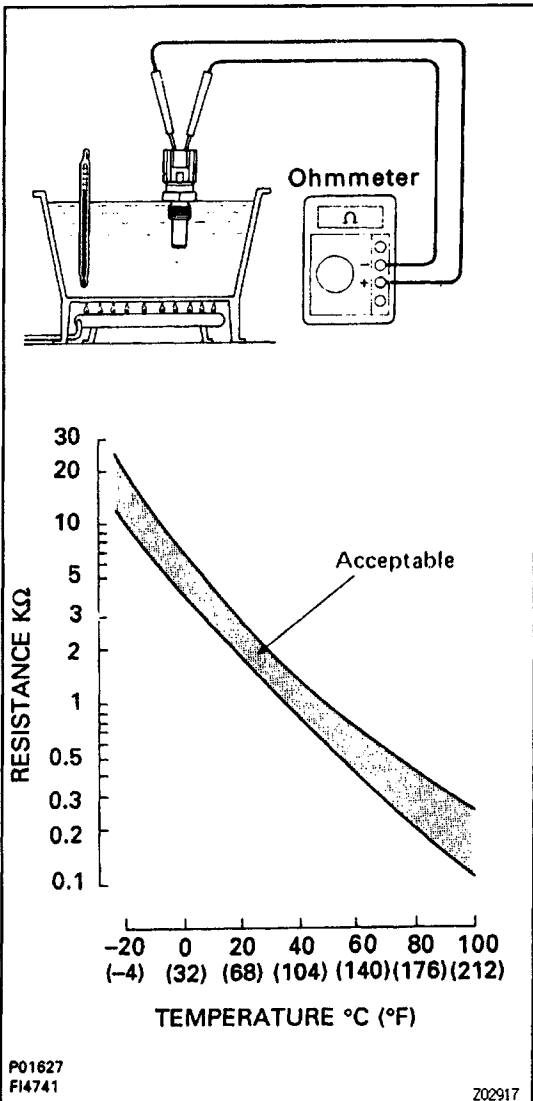


ENGINE COOLANT TEMPERATURE SENSOR (ECTS)

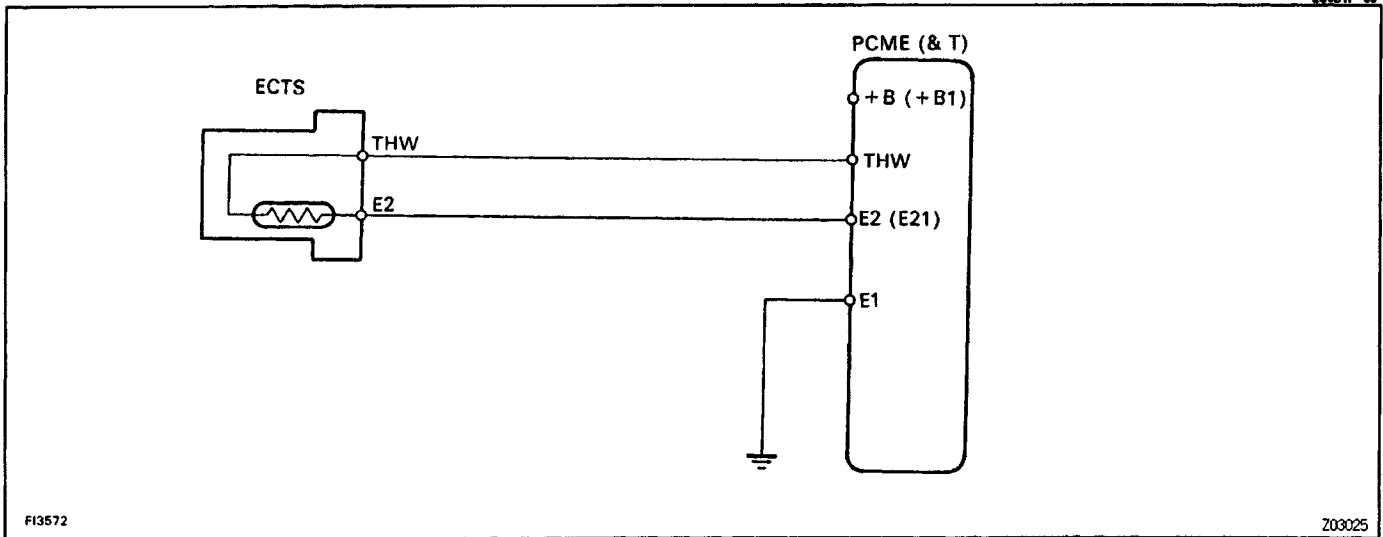

ECTS INSPECTION

1. REMOVE ECTS
2. INSPECT ECTS

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

Refer to the chart graph

If the resistance is not as specified, replace the ECTS.

3. REINSTALL ECTS