PREPARATION SST (SPECIAL SERVICE TOOLS)

	09308–00010 Oil Seal Puller	
	09309–12020 5th Driven Gear Replacer	
	09310–35010 Countershaft Bearing Replacer	Output shaft front bearing
	09316–60010 Transmission & Transfer Bearing Replacer	
	(09316–00010) Replacer Pipe	••••••••••••••••••••••••••••••••••••••
Ø	(09316–00040) Replacer "C"	
	09350–32014 TOYOTA Automatic Transmission Tool Set	
Ø	(09351–32120) Overdrive Bearing Replacer	Differential side bearing
	(09351–32130) Handle	
	(09351–32150) oil Seal Replacer	Differential side bearing Oil seal (Transaxle case side)
	09502–10012 Differential Preload Puller	
(F)	09564–32011 Differential Preload Adaptor	
	09608–12010 Front Hub & Drive Pinion Bearing Replacer Set	

0	 (09608–00070) Drive Pinion Rear Bearing Cone Replacer	Input shaft rear bearing 4th drive gear and rear bearing
	09608–20012 Front Hub & Drive Pinion Bearing Tool Set	
B	(09608–00080) Replacer	Input shaft front oil seal
	 (09608–03020) Handle	
	 (09608–03060) Replacer	Differential taper roller bearing outer race (Transaxle case side)
0	09612–22011 Tilt Handle Bearing Replacer	
	09950–00020 Bearing Remover	
	09950–20017 Universal Puller	

RECOMMENDED TOOLS

	09025–00010 small Torque Wrench	Differential preload
- DE LEA	09031–00030 Pin Punch	
	09905–00012 Snap Ring No. 1 Expander	

EQUIPMENT

Dial indicator	
Torque wrench	
Feeler gauge	

LUBRICANT

Item	Capacity	Classification
Manual transaxle oil	2.6 liters (2.7 US qts, 2.3 Imp.qts)	API GL–3, 4 or 5 SAE 75W–90

SSM (SPECIAL SERVICE MATERIALS)

08826–00090	Seal Packing 1281, Three bond 1281 or equivalent	Transmission case x Transaxle case Transmission case x Case cover
08833–00080	Adhesive 1344, THREE BOND 1344, LOCTITE 242 or equivalent	Straight screw plug Control shaft cover bolt

MX028-01

MX029~01

MX027-01