 
 
 

 

 


 


# PREPARATION


## SST (SPECIAL SERVICE TOOLS)

SA0C4-01

	<p>09316-60010 Transmission &amp; Transfer Bearing Replacer</p>	
	<p>(09316-00010) Replacer Pipe</p>	
	<p>09350-32014 TOYOTA Automatic Transmission Tool Set</p>	
	<p>(09351-32111) Side Bearing Race Replacer</p>	
	<p>(09351-32130) Handle</p>	
	<p>(09351-32150) Oil Seal Replacer</p>	
	<p>09608-16041 Front Hub Bearing Adjusting Tool</p>	
	<p>(096008-02020) Bolt &amp; Nut</p>	
	<p>(096008-02040) Retainer</p>	
	<p>09950-00020 Bearing Remover</p>	<p>Center drive shaft dust cover</p>

SA0C5-01

## RECOMMENDED TOOLS

	<p>09905-00012 Snap Ring No. 1 Expander</p>	<p>For removing and installing snap ring</p>
---	---	--

SA0C6-01

## EQUIPMENT

<p>Torque wrench</p>	
----------------------	--

**LUBRICANT**

Item	Capacity	Classification
Outboard joint grease	<b>120 - 130 g (4.2 - 4.6 oz.)</b>	
Inboard joint grease	<b>232 - 242 g (8.2 - 8.5 oz.)</b>	