

D RUST PREVENTIVE TREATMENT

- BODY SEALING ----- D - 1
- APPLICATION ----- D - 1
- UNDERCOATING ----- D - 7
- APPLICATION ----- D - 7
- RUST PREVENTIVE AGENT ----- D - 8
- APPLICATION ----- D - 8

1 BODY SEALING


1-1 APPLICATION

1-1-1 INSTRUCTIONS FOR WORK


For the rust prevention and waterproofing, fill body sealer to the joint section of the body panel and panel's hemming section.

CAUTION

- Clean the sections to which the body sealer is applied, using a cloth dampened with white gasoline.
- Remove any body sealer adhering to those sections where such application is not required, using a cloth dampened with white gasoline.
- Remove spot sealer which adhered to the sealer applying section with thinner. Then, apply primer for rust prevention, and apply body sealer.

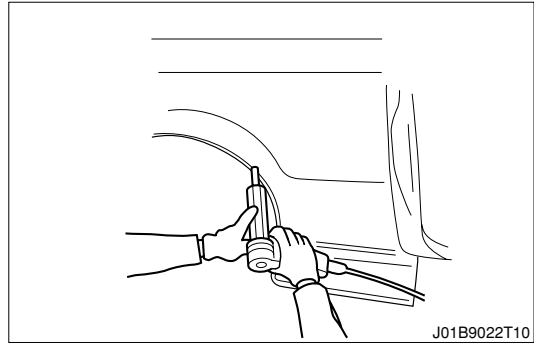


1-1-2 APPLICATION AREAS

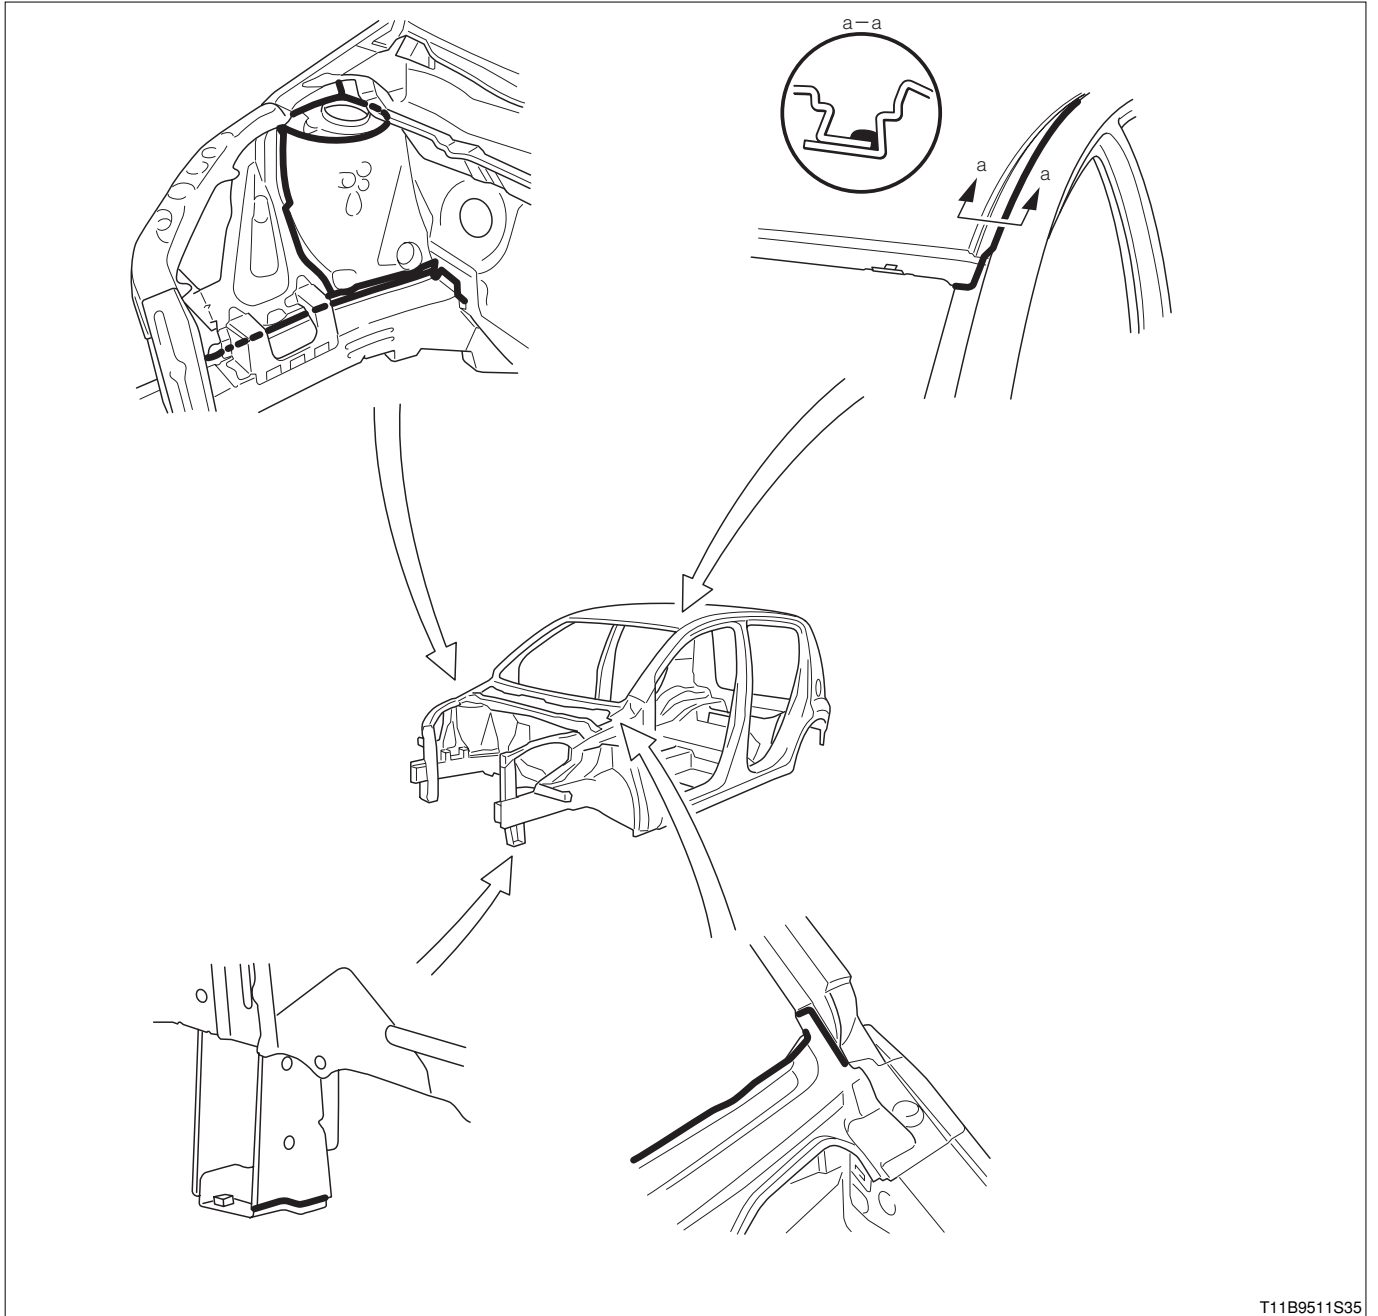


T11B9511S35

The illustration shows the applying sections for the vehicles of all specifications.


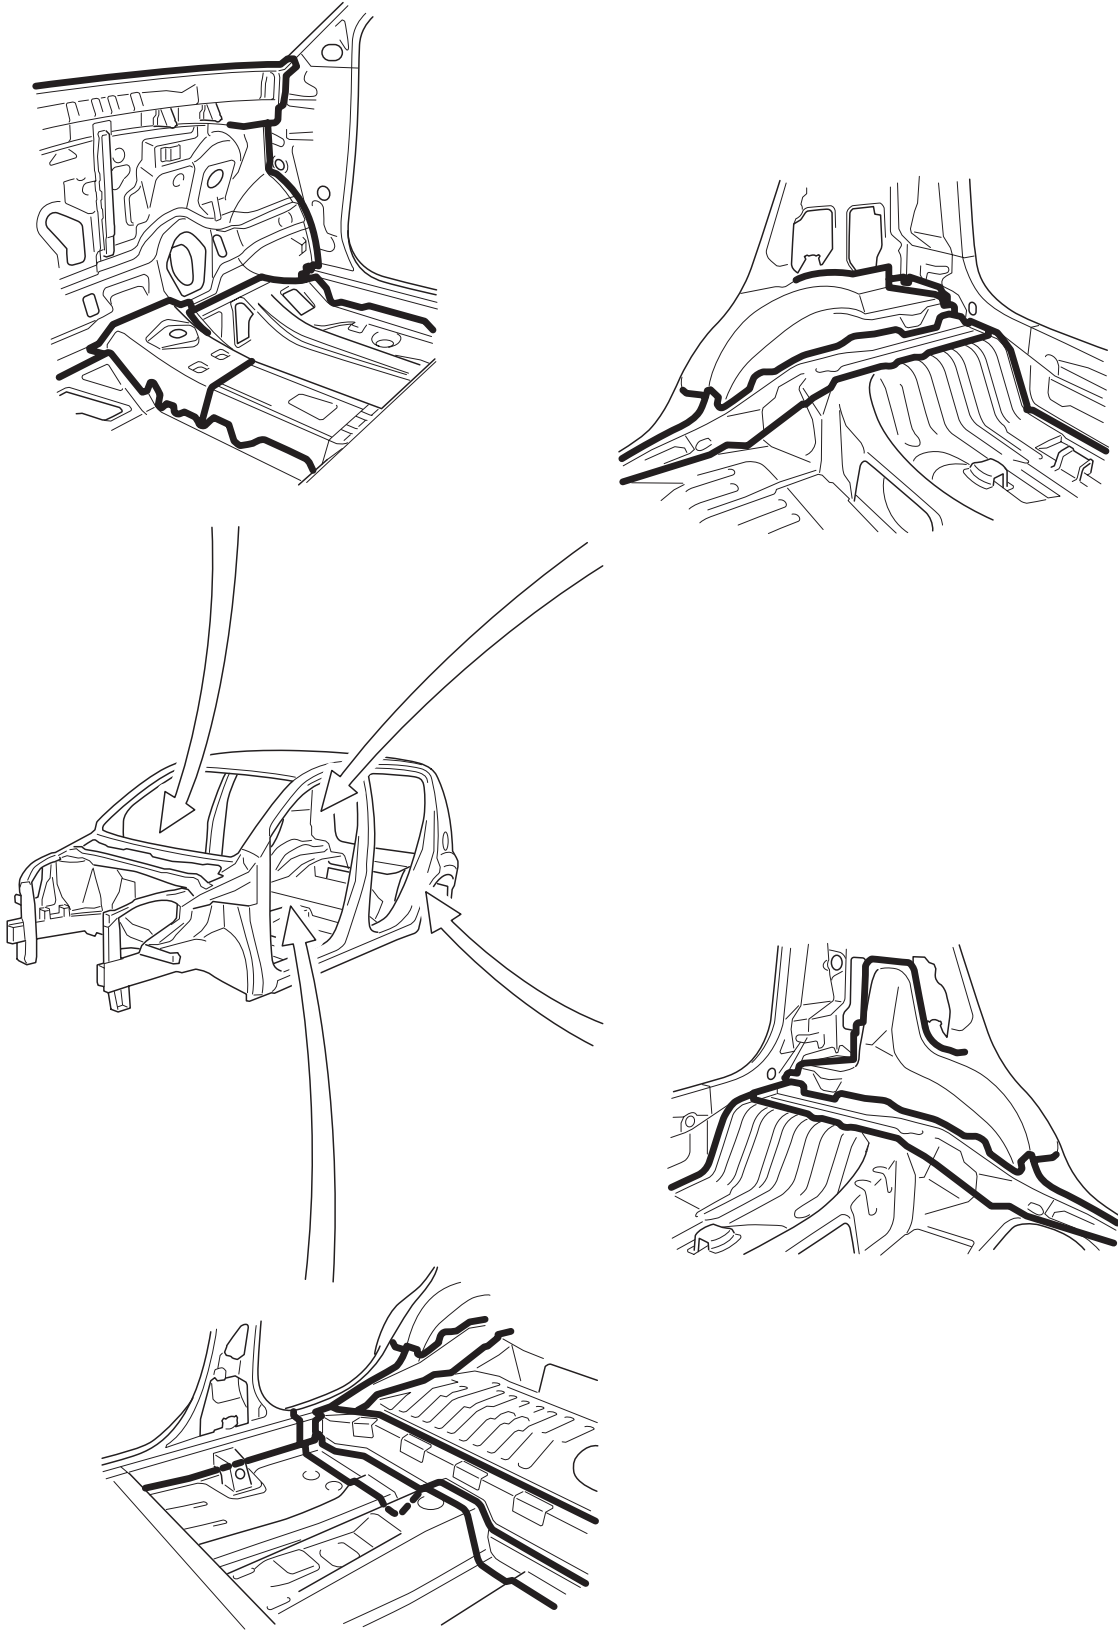


The illustration shows the applying sections for the vehicles of all specifications.

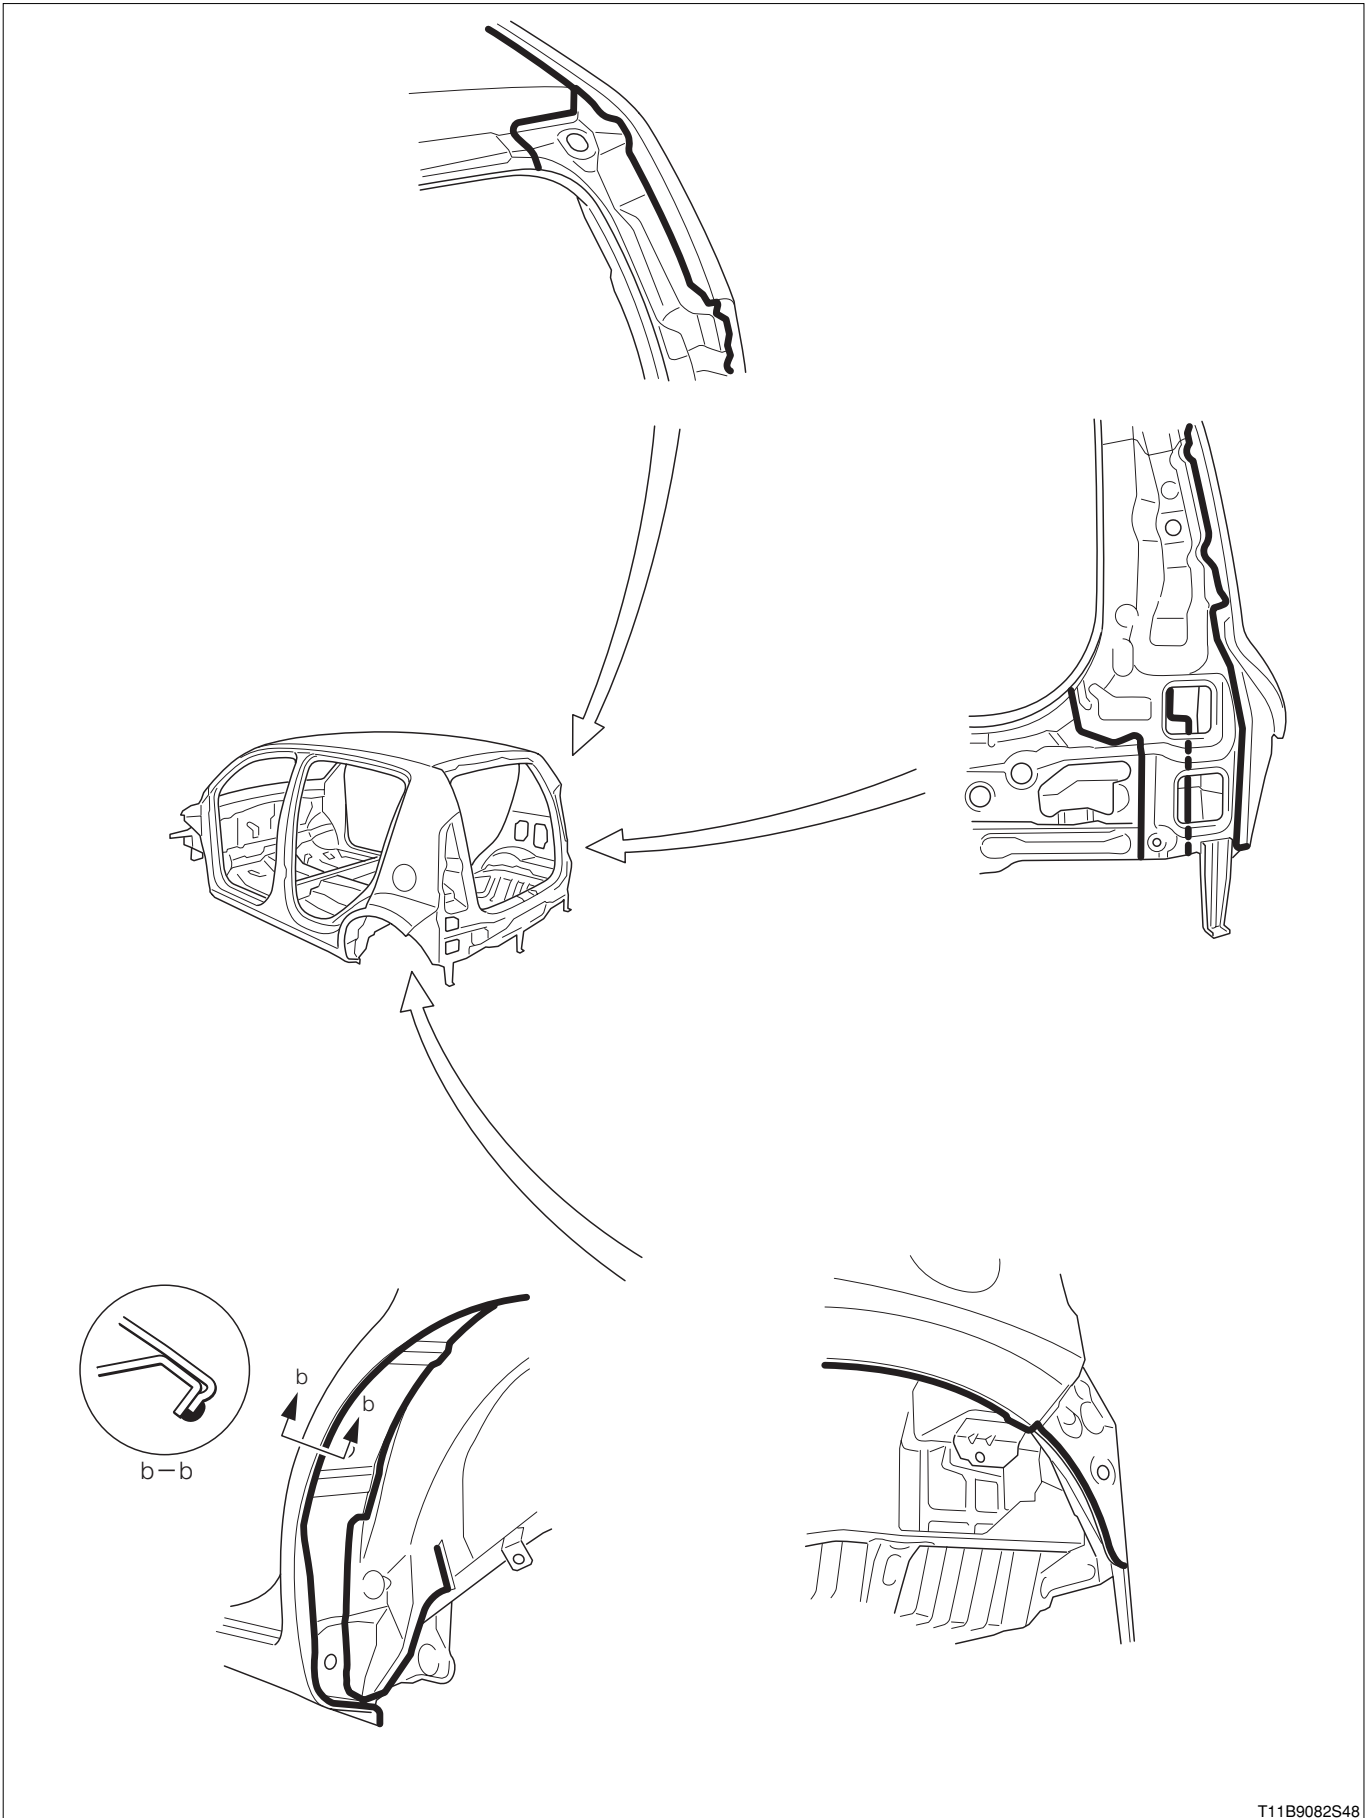


T11B9082S48

The illustration shows the applying sections for the vehicles of all specifications.

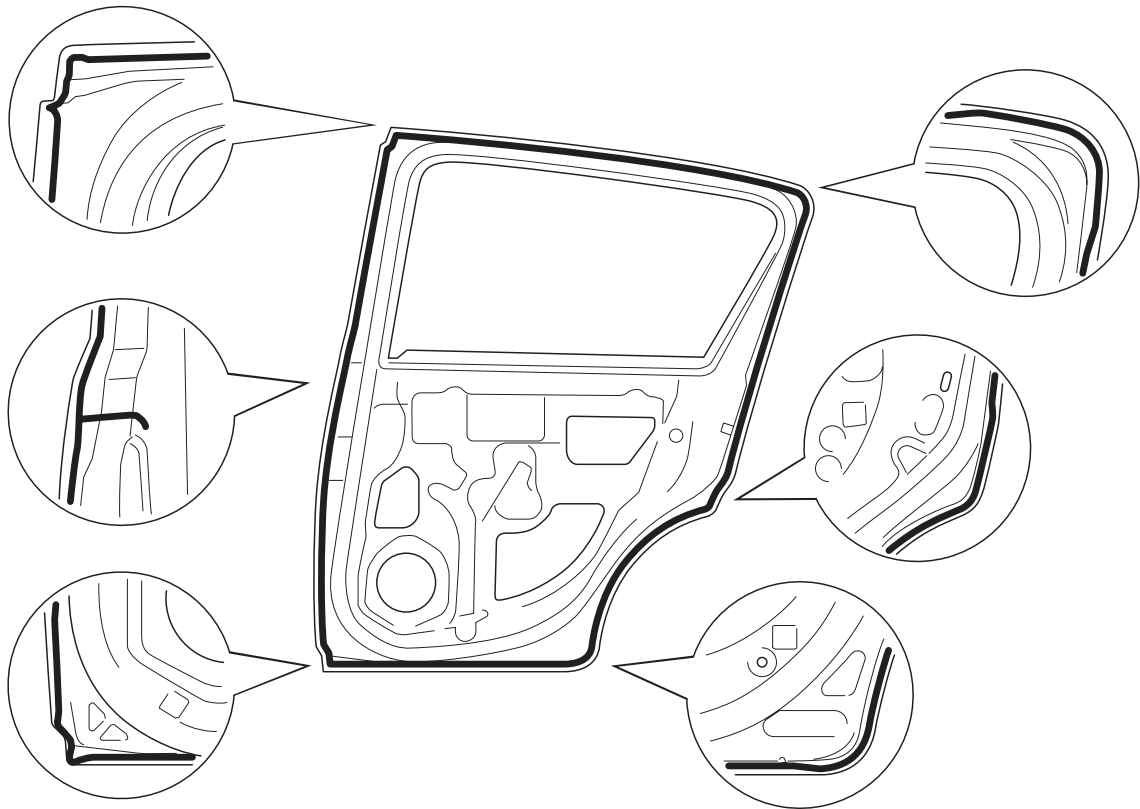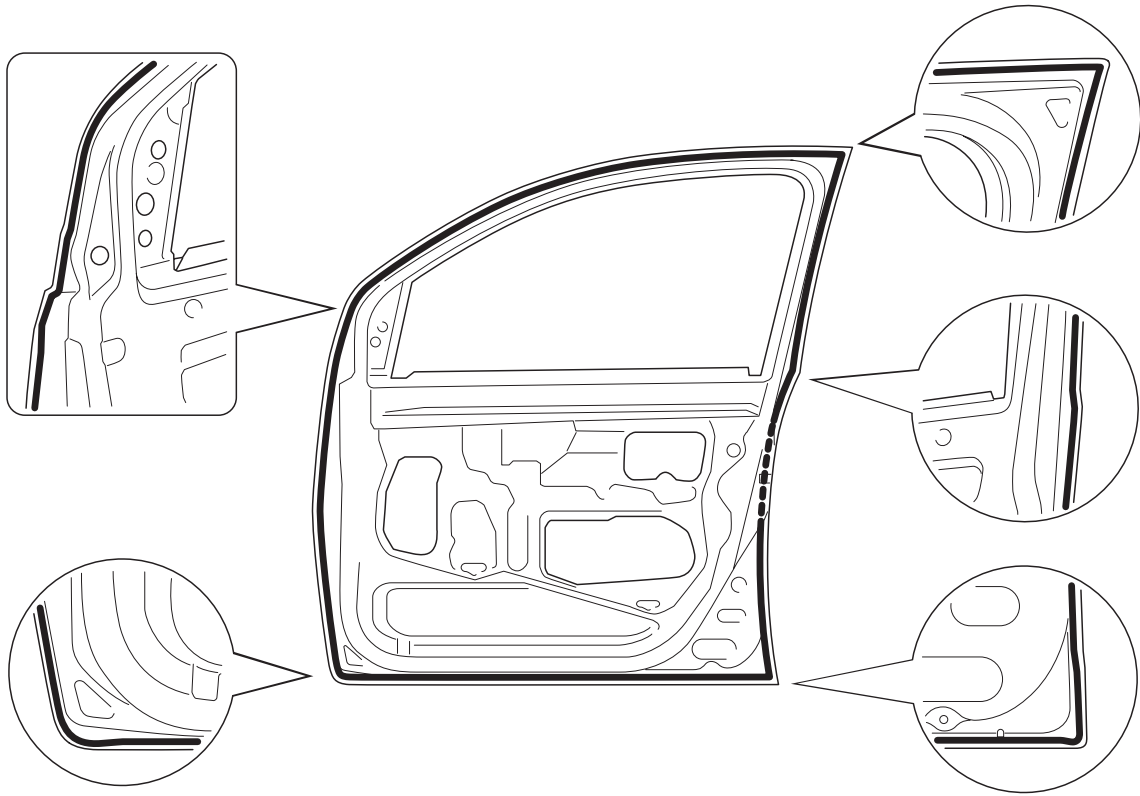

T11B9083S48

The illustration shows the applying sections for the vehicles of all specifications.

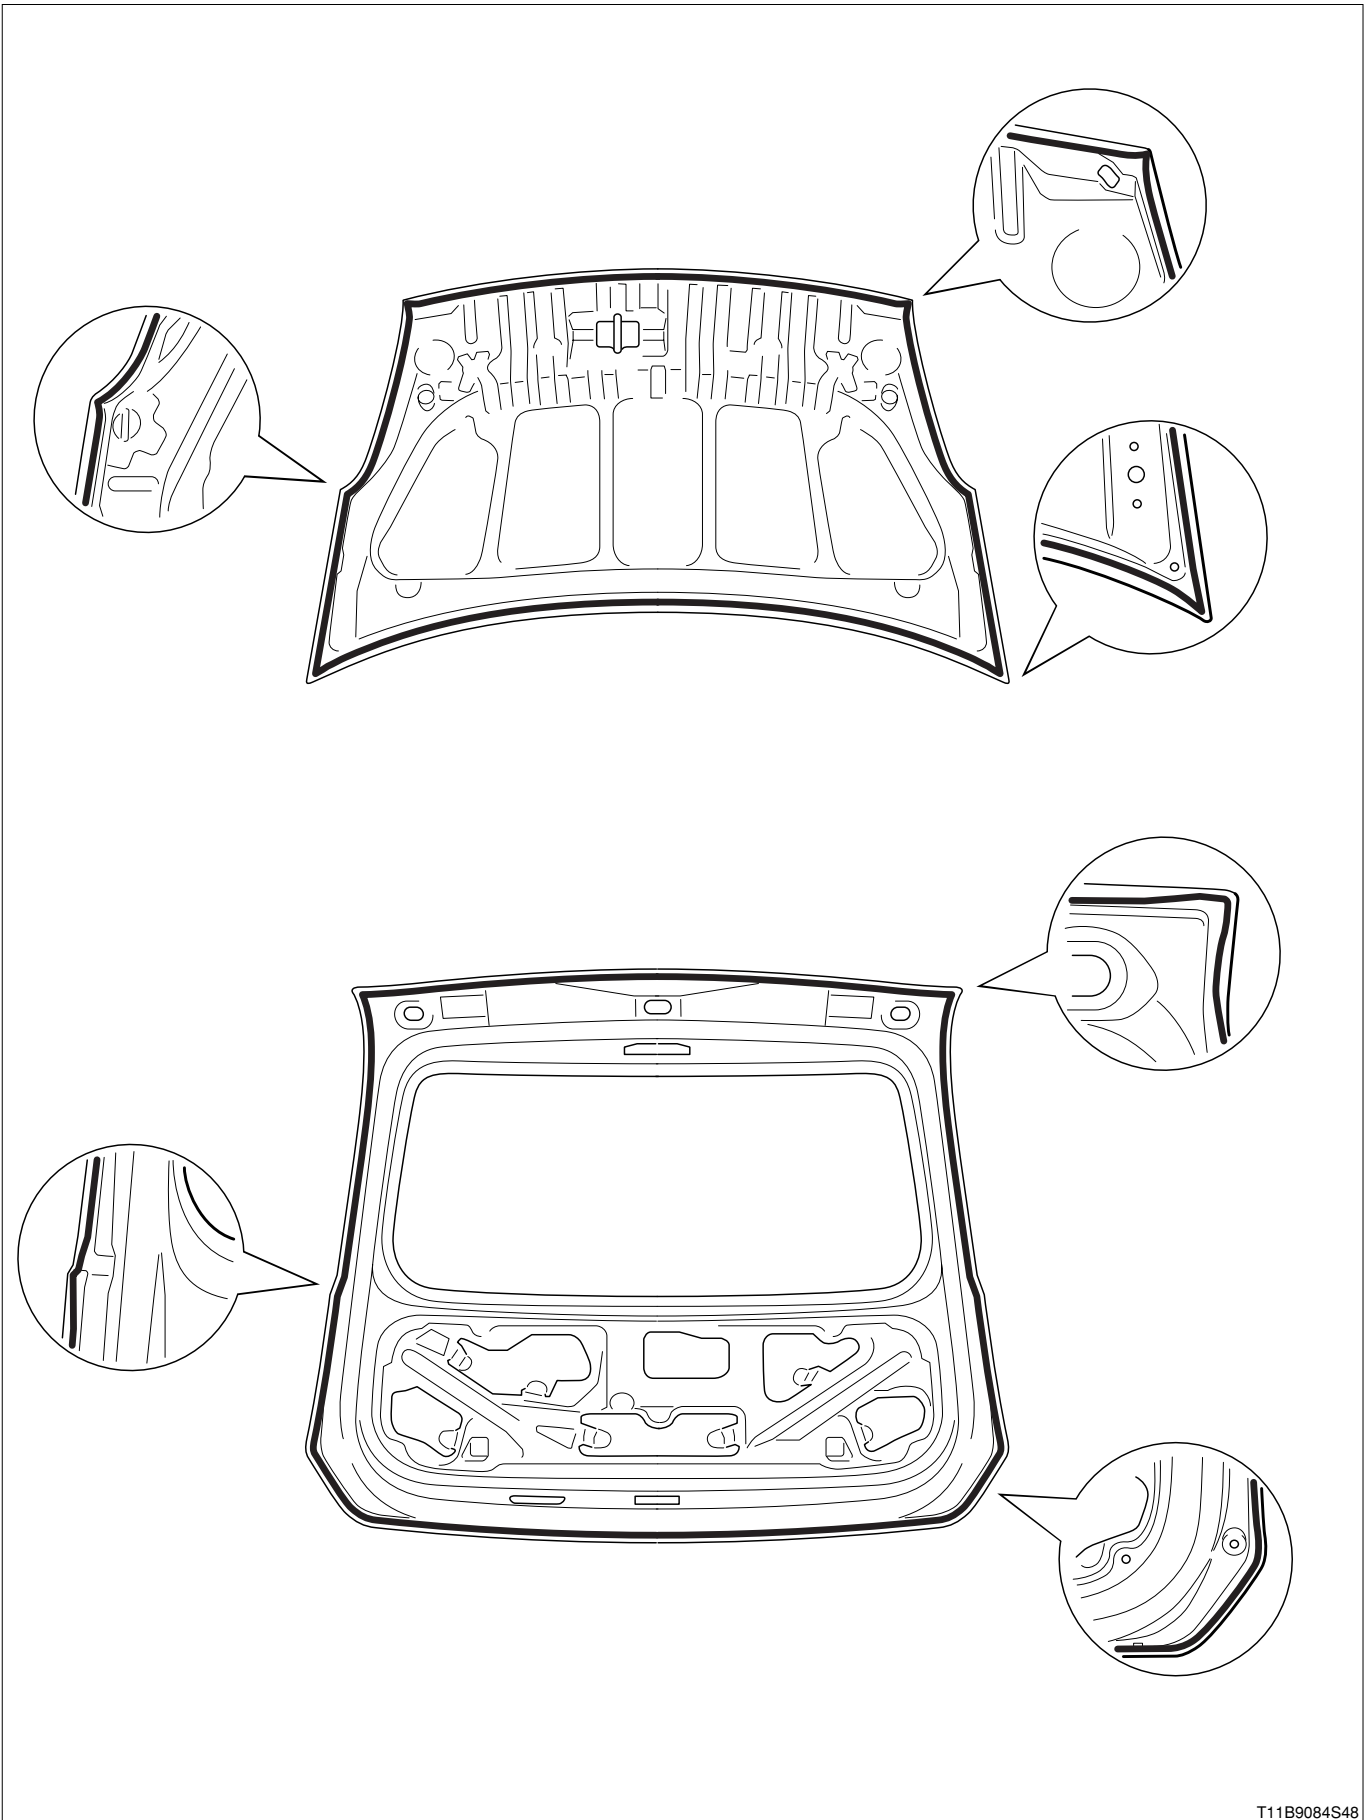

T11B9084S48

The illustration shows the applying sections for the vehicles of all specifications.

2 UNDERCOATING

2-1 APPLICATION


2-1-1 INSTRUCTIONS FOR WORK

For soundproof and rust prevention, apply the undercoat agent to the back side of the floor and the inside of the wheel house.

CAUTION

- Clean the sections to which the undercoat is applied, using a cloth dampened with white gasoline.
- Do not apply the undercoat to those sections where such application is not required; e.g. the muffler.
- If the back side of the floor has been welded, apply the undercoat for the purpose of rust prevention.
- Carefully close any clearance of a joint section between panels.

2-1-2 APPLICATION AREAS(UNDERCOAT)

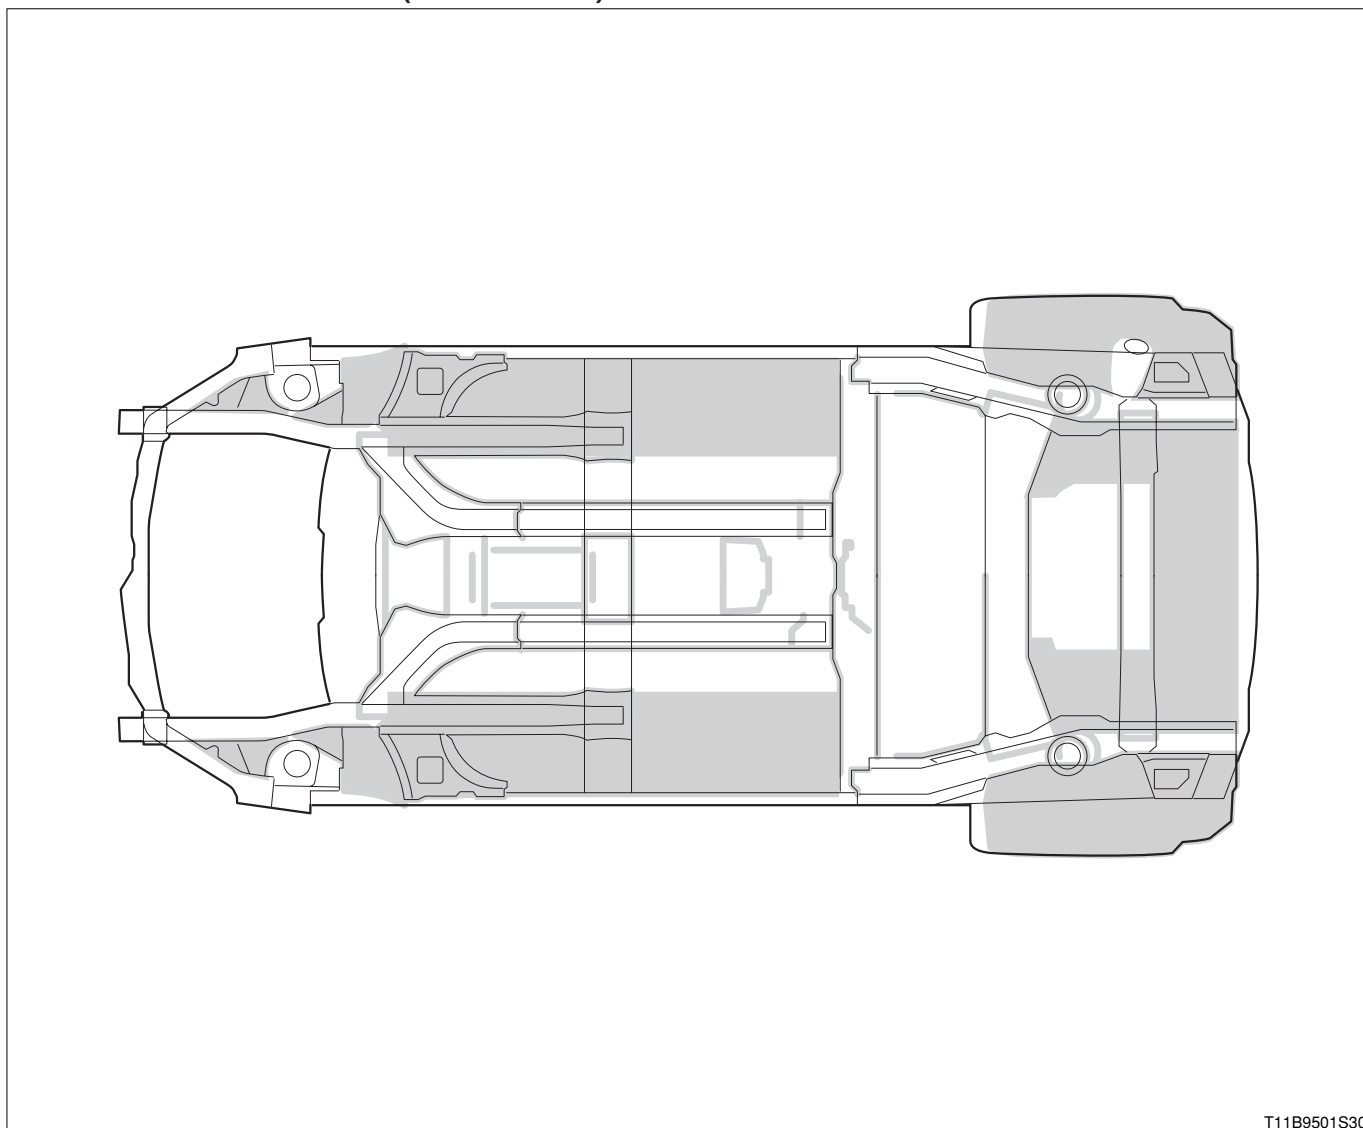

T11B9501S30

The illustration shows the applying sections for the vehicles of all specifications.

2-1-3 APPLICATION AREAS(ANTICORROSIVE AGENT)

Apply the anticorrosive agent to the back of the floor and undercarriage parts except for the tires, drive-shaft boots, exhaust pipes, brake discs, caution labels and the engine main body.

3 RUST PREVENTIVE AGENT

3-1 APPLICATION


3-1-1 INSTRUCTIONS FOR WORK

Apply rust-preventive agent to the joint section of the body panel, the reverse side of the hemming section of the door and hood (the forward end of the bending section of the external sheet), and around the hinge.

CAUTION

- Remove any agent adhering to those sections where such application is not required, using a cloth dampened with white gasoline.

3-1-2 APPLICATION AREAS

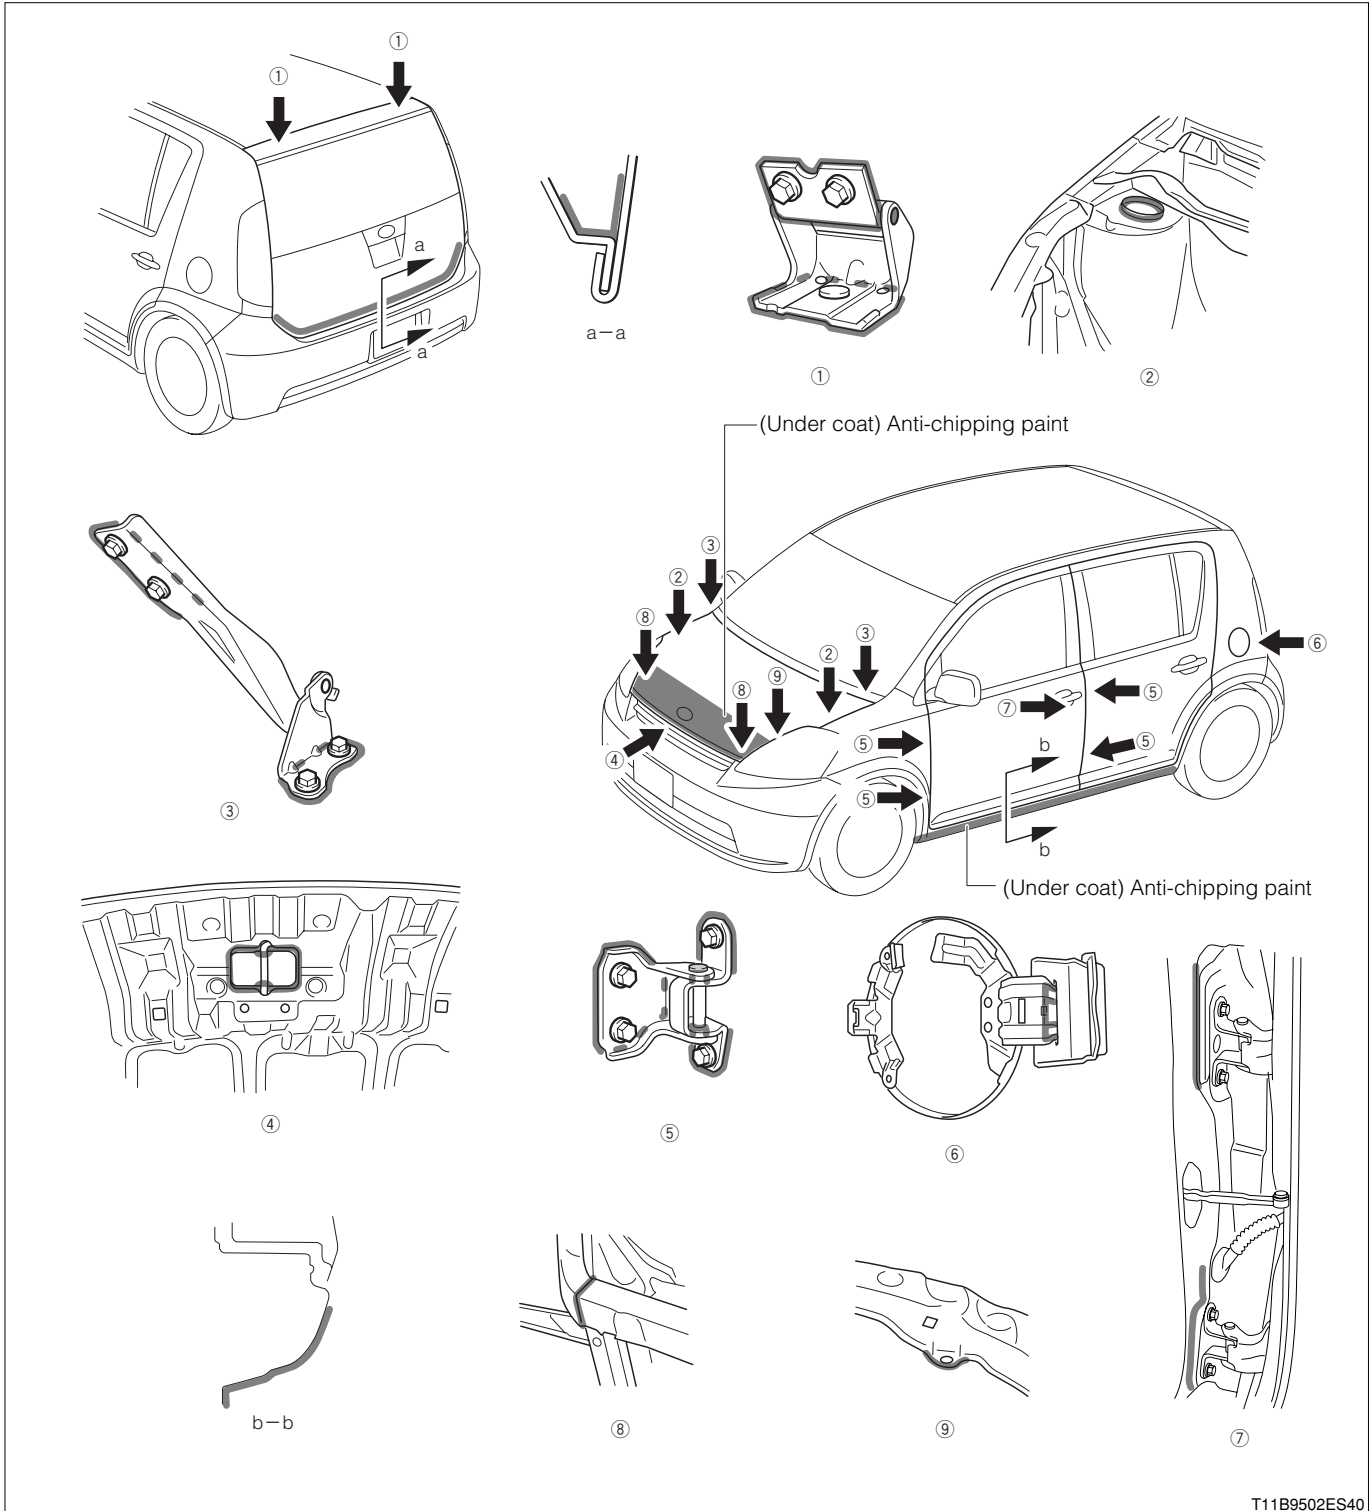

T11B9502ES40

The illustration shows the applying sections for the vehicles of all specifications.